

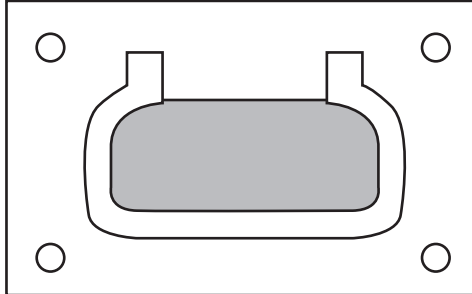


HBP4014 RECESSED BIN PULL INSTALLATION

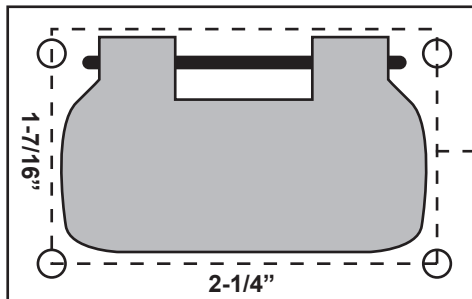


Front

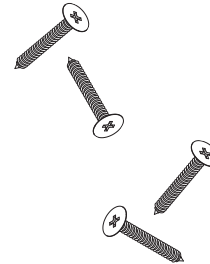

Back

- 1** With a pencil, mark on your drawer where the outside edges of the recessed area is, approximately 2-1/4" x 1-7/16".

Due to each being handmade, measurements shown may vary slightly.

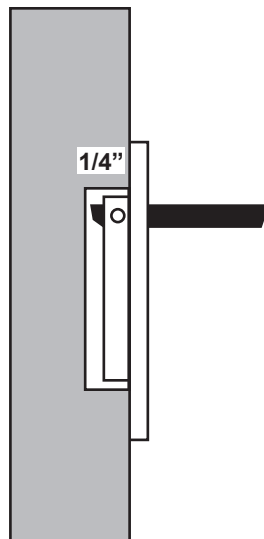

Side

- 2** Router/chisel out the area to 1/4" deep and slightly larger than the back surface of the recessed area.

- 3** Your pull is now ready to be attached using the four included screws.